

**B5D<sup>®</sup> installation and  
activation manual**



Quantification  
software

**BIM**

Deconstructing projects,  
building a better future.


**Content:**

- 1. Download the latest version of BIMvision available.....2
- 2. Installation of BIMVision on the computer. ....4
- 3. Installation of B5D® on the computer. ....6
- 4. Extraction of the computer serial number.....8
- 5. License activation in B5D®.....9
- 6. BIMVision license activation.....10




1. Download the latest version of BIMvision available.


1.1. You must enter the following portal: <https://bimvision.eu/es/descargar/> within the search engine of your choice.

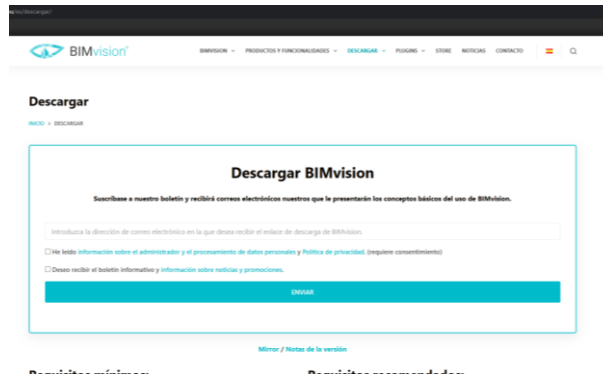

1.2. Enter your email inside the box “Enter the email address where you want to receive the link for the BIMvision download.”

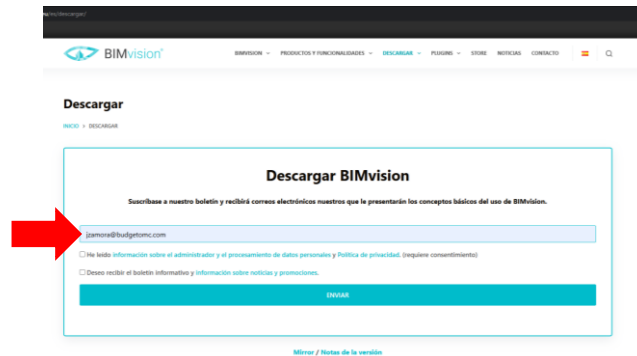

1.3. It is necessary to read the “information about the administrator and processing of personal data and Privacy Policy.” Since Budgeto, S. A. de C.V. is not responsible for the processing of your data by Datacomp and does not allow the download of the software without the consent of said situation.

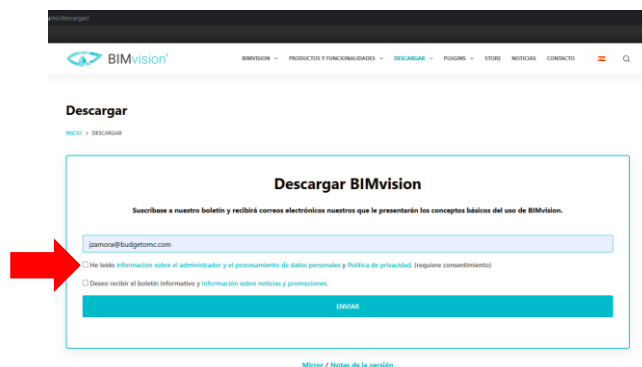

1.4. Whether or not to receive the newsletter and information about news and promotions is optional.

Descargar

Descargar BIMvision

Suscríbete a nuestro boletín y recibirás correos electrónicos nuestros que te presentarán los conceptos básicos del uso de BIMvision.

He leído información sobre el administrador y el procesamiento de datos personales y Política de privacidad. (requiere consentimiento)

Deseo recibir el boletín informativo e información sobre noticias y promociones.


Mirar / Notas de la versión

1.5. Once you have filled out the form, a hyperlink will be sent to your e-mail and you only need to click on the download button and the installer file will be in your computer.



## 2. Installation of BIMVision on the computer.

2.1. Click on the downloaded BIMVision installer.

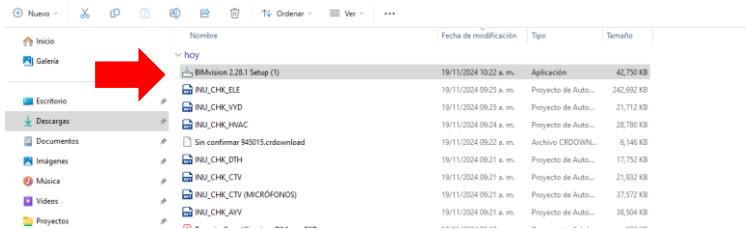


2.2. Allow the modification of the computer within the administrator dialog box to start the installation of the program.

2.3. Start to advance within the installer by clicking next in each of the windows that appear within the dialog box.




2.4. Read carefully the terms and conditions that Datacomp establishes, which must be accepted, otherwise it will not allow the installation.

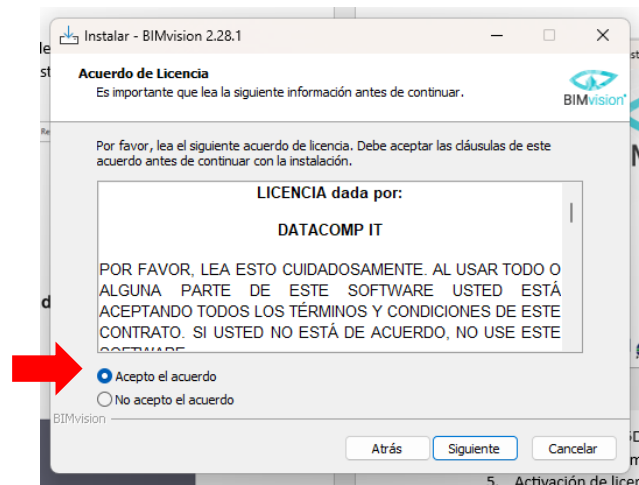


2.5. It is up to the user to configure the hyperlinks on his or her computer, the only option that needs to be set is to associate all IFC documents to BIMvision.


2.6. Click on Next.

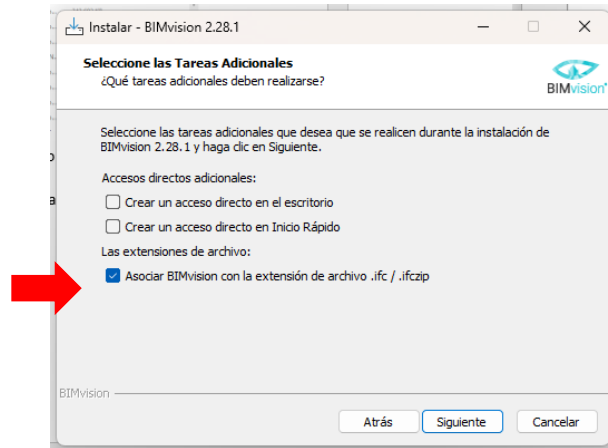

2.7. Click on install.

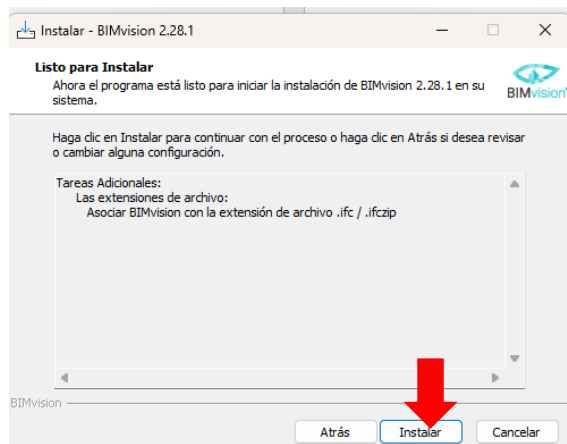


2.8. Click on finish.

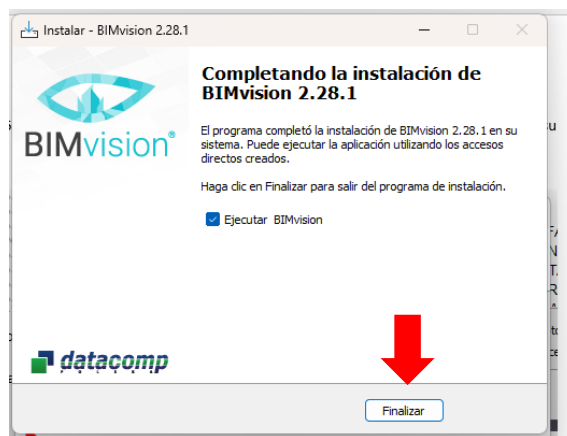

### 3. Installation of B5D® on the computer.

3.1. Locate the B5D® installer on the computer and run it.

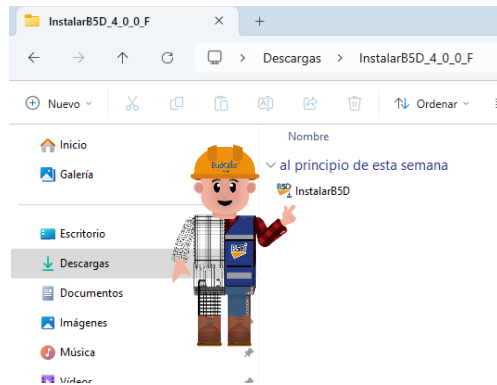


3.1.1. If your Microsoft Defender® does not allow the installation, click on more information and click on “Run anyway”.




3.2. Allow the modification of the computer within the administrator dialog box so that the program can begin to be installed.


3.3. Select the language in which the installation is to be carried out.

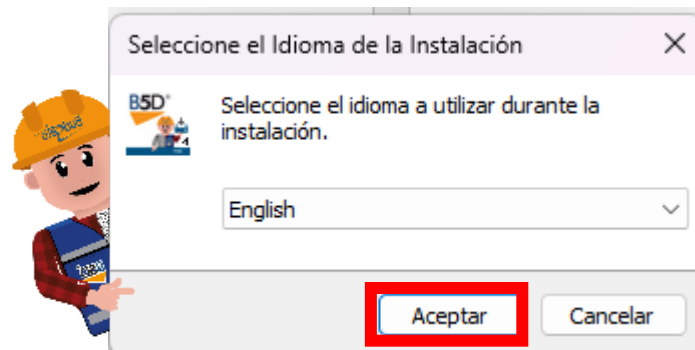

3.4. Click on “install” to start the program installation procedure.

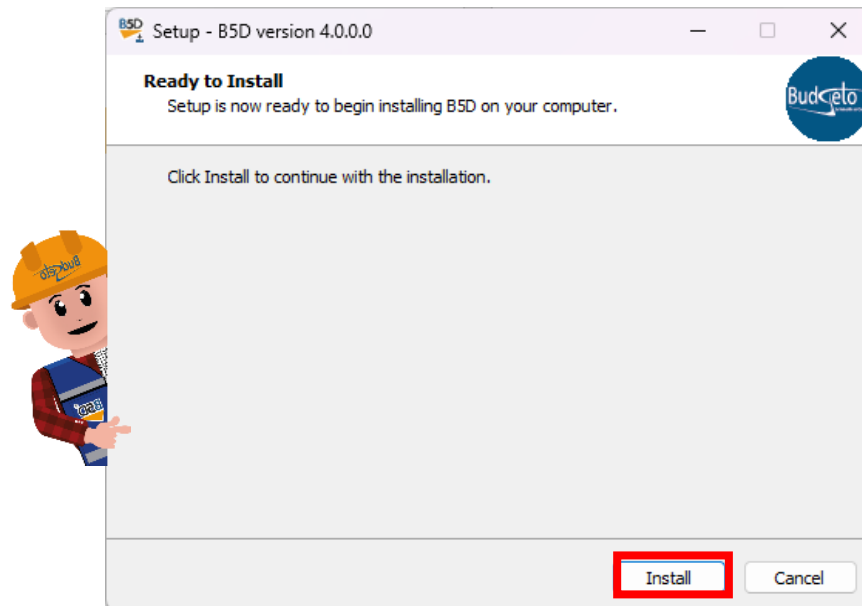


3.5. Wait for the installer to complete the whole process and click on “finish” to conclude the installation process.

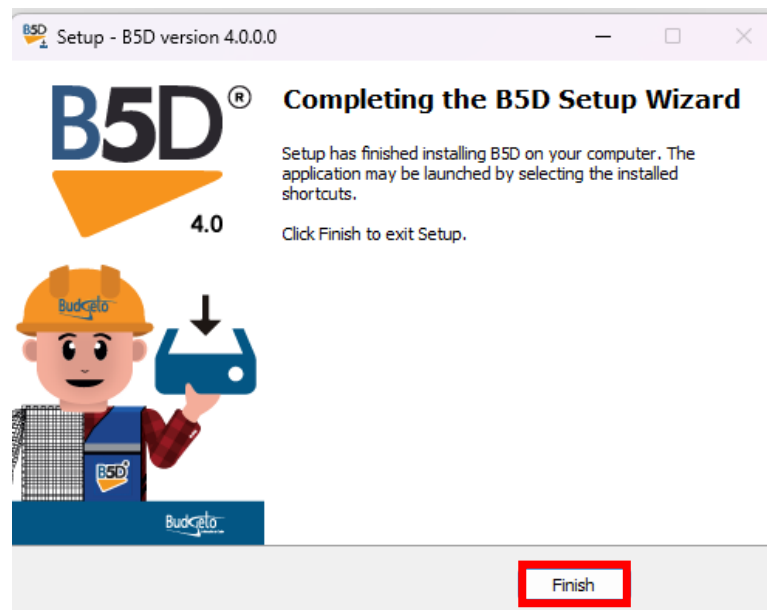




#### 4. Extraction of the computer serial number.


4.1. Once the installation is complete, it is necessary to first open BIMVision and change the language to Spanish.

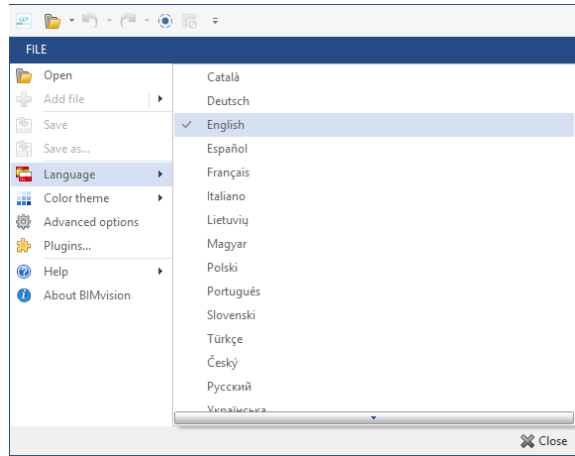


4.2. Restart the program and it is now possible to enter the Plugins file and click on B5D®.

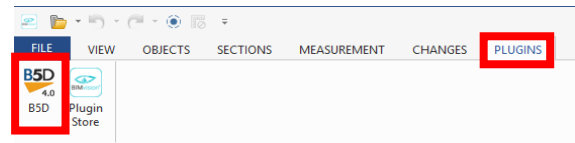

4.3. Within B5D®, locate the options button which will open the "Configuration" dialog box.

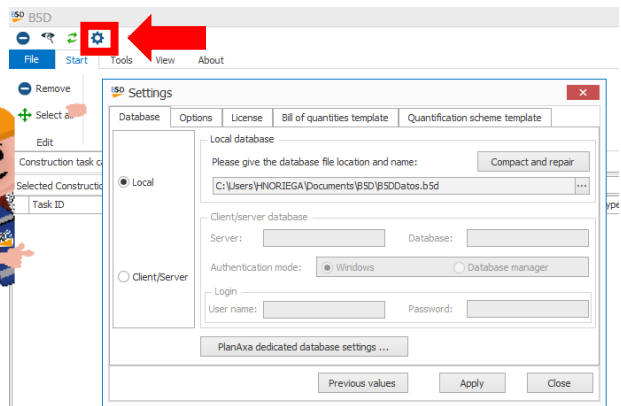

4.4. In this dialog box, go to the "License" file. Locate the "Equipment fingerprint" section and click on the "Copy equipment fingerprint to clipboard" button.

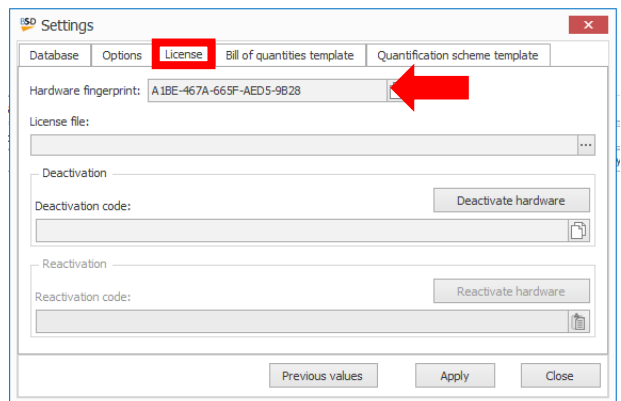


4.5. Send this number to your B5D® provider.




## 5. License activation in B5D®.



5.1. The B5D® supplier will send a license document which will be placed in the root folder of B5D®.

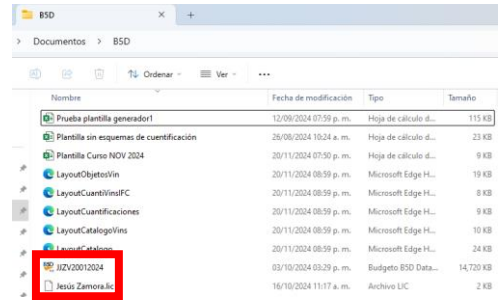



5.1.1. Location of the root folder is located inside the dialog box, in the options file, in the “Folder to store the program files” section.

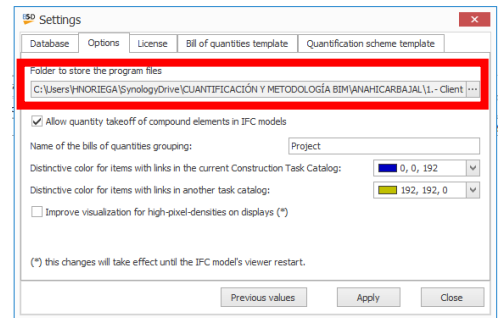

5.2. Within the configuration dialog box, click on the 3 dots button and it will open a file explorer where the license file (.lic) must be located and click on open.

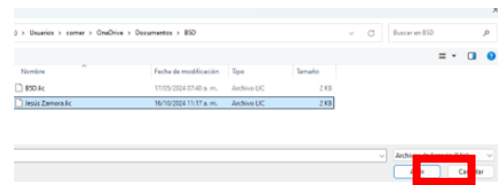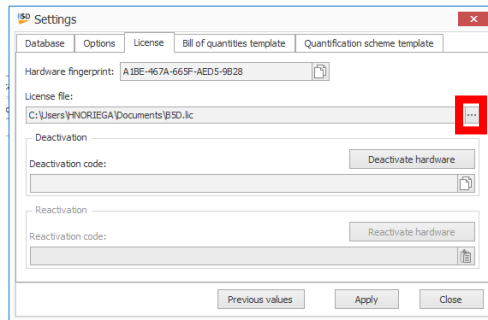


5.3. Finally, again in the Configuration dialog box, click on “Apply” and wait for confirmation of the activated license.

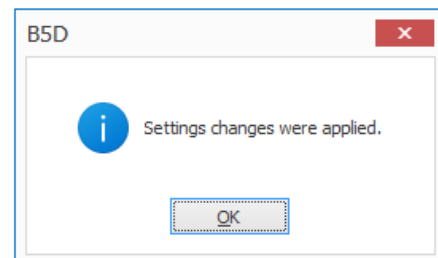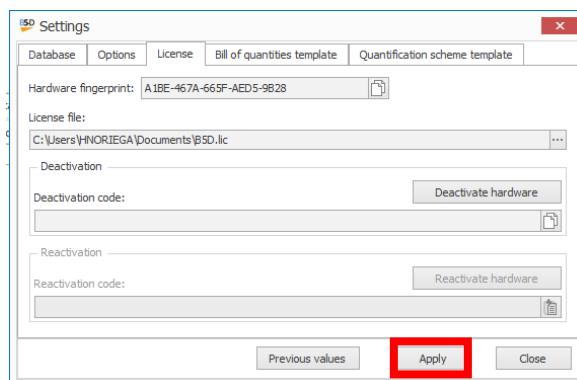


## 6. BIMVision license activation.

6.1. The B5D® supplier will provide an activation code for the BIMVision® license which will be placed inside the program.

6.2. Go to the archive file within BIMVision®, and click on “Plugins”.

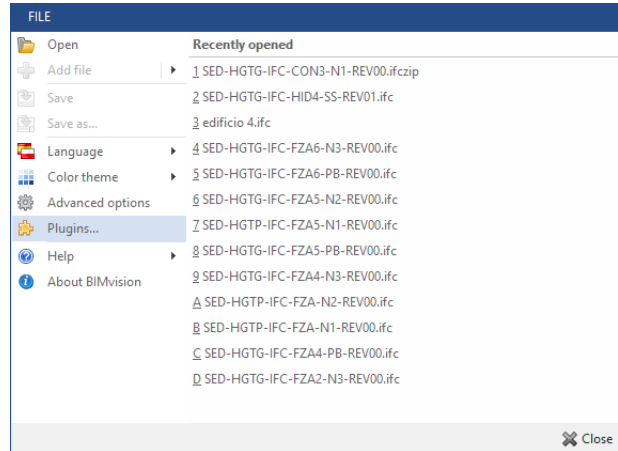

6.3. In the “License” text box, enter the code provided and click on “Restart application”.

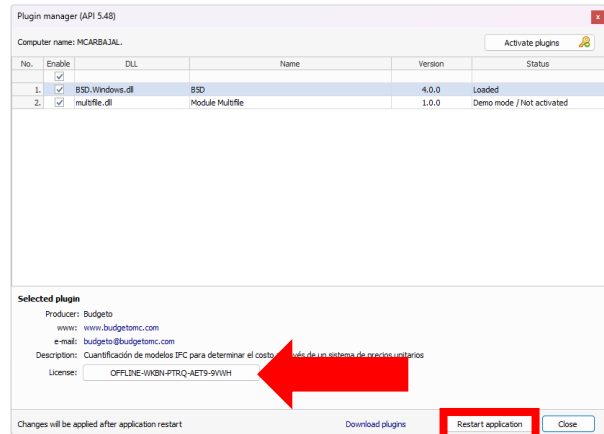

6.4. The application will restart and you will be able to enjoy the benefits of the licensed B5D® software.

